

DEESEA
POWER & LIGHT



Nano SeaLite®

Compact. Durable. Astonishing Light Output for its Size.



Operator's Manual

Nano SeaLite®

Record product serial number below as it appears on the nameplate.

Serial #

Connector Type

Pin-outs

- Positive = Pin ____
- Negative = Pin ____
- Ground = Pin ____
- Dimming (if applicable) = Pin ____

T: (858) 576-1261
F: (858) 576-0219

4033 Ruffin Road
San Diego, CA
92123- 1817 USA

www.deepsea.com
sales@deepsea.com



Original Instruction

REV 04-28-14

Specification Overview

Mechanical Specifications	
Body Material	6Al-4V Titanium
Window Material	Sapphire
Mounts	High Strength Plastic Mounting Collar (Standard) Helmet Mounting Brackets with Quick Release (Optional)
Weight in Air	113.7 g (4.01 oz)
Weight in Water	54.99 g (1.94 oz)
Implodible Volume	5.987 cm ³ (0.365 in ³)
Length (w/o Connector)	49.9 mm (1.97 in)
Outer Diameter	25.0 mm (0.98 in)
Environmental Specifications	
Depth Rating	6km (19,685ft) standard 12km (39,370ft) optional
Test Pressure	10,000 psi
Min/Max Operation Temp.	-10° C to 50° C (14° F to 122° F)
Optical Specifications	
Color	White
Lumens in the Water	700 Lumens Typical
Color Temp	Standard: 7200K (White LED)
Beam Pattern (FWHP)	70° Flood
Electrical Specifications	
Input Voltage Range	10-36V DC
Input Current	1.16A @ 12V, 0.38A @ 36V
Input Power	14 W

Standard Connector






MCBH4MP

- 1 = Negative (-)
- 2 = Positive (+)
- 3 = Not Used
- 4 = Not Used

**Other connectors and pin-out options are available upon request.*

Dimensions

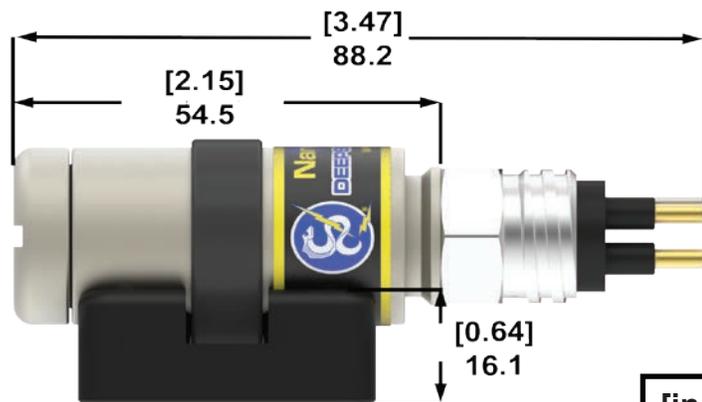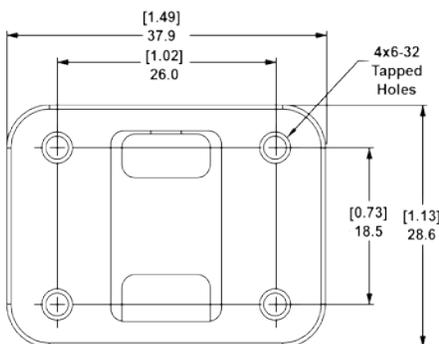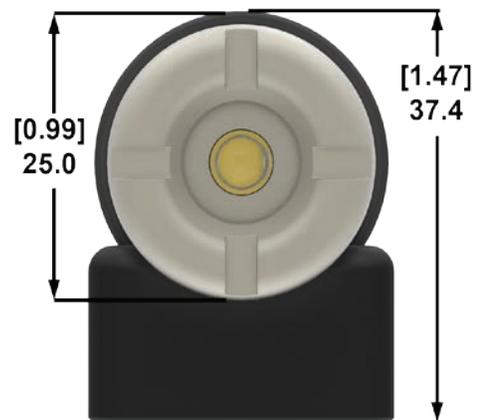

[inch]
mm

Table of Contents

Specification Overview.....	2
Table of Contents	3
Safety Symbols	4
General Notes & Warnings	4
Pre and Post Dive Inspection.....	4-5
Flooded Light Repair	5
Troubleshooting	5
RMA Procedure for Repair	5
Limited Warranty	6

Safety Symbol

In this operator’s manual and on the product, safety symbols are used to communicate important safety information. This section is provided to improve understanding of these symbols.



This is the safety alert symbol. It is used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.



DANGER indicates a hazardous situation which, if not avoided, could result in death or serious injury.



WARNING indicates a hazardous situation which, if not avoided, could result in damage to the product or bodily harm.



CAUTION indicates a hazardous situation which, if not avoided, could result in minor or moderate injury.



NOTICE indicates information that relates to the protection of property.



This symbol means read the operator’s manual carefully before using the equipment. The operator’s manual contains important information on the safe and proper operation of the equipment.



This symbol means always wear safety glasses with side shields or goggles when handling or using this equipment to reduce the risk of eye injury.



This symbol indicates the risk of electrical shock.

General Notes and Warnings

The Nano SeaLite can be run in air, but will go into thermal rollback, where its light output diminishes to protect the light from overheating. This is normal and purposely designed to protect the LEDs from being damaged by excess heat buildup while running in air. The light will return to full brightness once it is submerged in water or it’s allowed to cool down. This thermal rollback will not happen when light is being operated in water under normal usage.



When the Nano SeaLite is operated in air the body may reach temperatures in excess of 65° C. These temperatures may be enough to cause burns if the light is handled without protective clothing.



Do not operate any high voltage electrical equipment in or around water without using a Ground Fault Interrupt circuit (GFI) and an isolation transformer, especially when divers are in the water.

Pre and Post Dive

Inspection

Rinse your Nano SeaLite in fresh water after use in saltwater.

Always check to make sure that the rear bulkhead connector assembly is secure before deployment.

Before and after each deployment, check the following areas for damage, wear or corrosion:

- Rear bulkhead connector assembly
- Power cable
- Front window



After each deployment, carefully check to make sure the light has not flooded. It is possible for the light to partially flood and then reseal itself while underwater. Upon surfacing, the light can become internally pressurized, which may be potentially dangerous. Additionally, if the power remains on when the light has partially flooded, it is possible for electrolytic generation of an explosive mixture of hydrogen and oxygen gases. If a light appears flooded

upon removal from the water, it should be treated as potentially dangerous. Point the light away from persons and valuable equipment and make sure that the power is disconnected.

Flooded Light Repair



If the light stops working while underwater, you should assume that it has been flooded. When working on a potentially flooded light, it is important to use appropriate personal protective equipment to include, at a minimum, eye and hand protection.

1. Immediately turn off the power to the unit.
2. Place the light face down on a table making sure that the connector side is facing up.
3. Using a small flat screwdriver, remove the retaining ring that holds the endcap assembly in its place.
4. With the retaining ring off, grab the connector and slowly pull it straight up and out of the housing allowing any internal pressure to be equalized.
5. Pour out any water trapped in the housing.
6. Once it is determined that the light is not internally pressurized, it is recommended that the light be returned to DeepSea Power & Light (DSPL) for evaluation and repair using the RMA Procedure.
7. In case of emergency, you may attempt to repair the flooded light. Any parts that were exposed to saltwater should be cleaned with de-ionized water to remove any salt residue before reassembly. Make sure that all parts are completely dry before reassembly by baking them in an oven at 140°F for 30 minutes.

NOTICE

IMPORTANT! DeepSea Power & Light cannot be responsible for any damage incurred during emergency field repairs. Such repairs should be undertaken only as a last resort and by qualified personnel.

Troubleshooting

1. If the light stops working while underwater assume that it has been flooded. See Flooded Light Repair procedure.
2. Once it has been determined that the light is not flooded, or if it does not turn on during pre-deployment checks, troubleshoot in the following sequence:
 - a. Check the power cable/inline connector to make sure that correct voltage and current are being supplied, and that the correct

pin-outs are being used. See the 2nd page this manual for electrical specs and connector pin-outs.

- b. Remove the connector (see step 2 in the Flooded Light Repair procedure). Inspect the assembly for visual signs of wear. Using a multi-meter check for continuity or shorts in the connector. Try a spare connector if available.
- c. Check the wires that go from the driver board to the connector for wear. If they appear worn, replace them.
- d. Check to make sure that the driver board is securely attached to the lighthouse. If it is loose, check for damage on the board. If there appears to be no damage, reattach the driver to the lighthouse. Try using a spare driver board if available.
- e. If the light still does not work, return it to DSPL using the RMA Procedure.

RMA Procedure for Repair

Should it be necessary to return your light to the factory, follow the procedure for the Flooded Light Repair above, and by leaving the connector partially unscrewed.

For warranty and non-warranty repairs please contact DeepSea Power & Light for a RMA number prior to returning your item. Please have your light model number, serial number and any other pertinent information along with a description of the problem, on hand when you call, or include them in a fax or e-mail. When shipping your item, be sure that the freight is pre-paid (CODs will not be accepted) and that the RMA number is clearly printed on the outside of the box. All shipments should be sent to the address below:

DeepSea Power & Light
Attn: RMA #####
4033 Ruffin Road
San Diego, CA 92123-1817
U.S.A
Tel: (858) 576-1261
Fax: 858-576-0219
e-mail: RMA@deepsea.com

Limited Warranty

Seller warrants that the goods (except internal electronic components) sold under this contract will be free from defect in material and workmanship for a period of one year from the date of shipment from the factory, if they have been properly used. Internal electronic components are warranted for 90 days from the date of shipment from the factory, if they have been properly used. This warranty will be limited to the repair or replacement of parts and the necessary labor and services required to repair the goods. IT IS EXPRESSLY AGREED THAT THIS WARRANTY WILL BE IN LIEU OF ALL WARRANTIES OF FITNESS AND IN LIEU OF THE WARRANTY OF MERCHANTABILITY. This warranty is the exclusive and only warranty to pass with the goods under this contract. No agent, employee, or representative of the Seller has any authority to bind Seller to any information, representation, or warranty concerning the goods sold under this contract, and unless an affirmation, representation, or warranty made by an agent, employee, or representative is specifically included within this contract, it will not be enforceable by Buyer. If notice of defect is given to DeepSea Power & Light, Inc. within such 90 day or one year warranty period, the sole obligation of DeepSea Power & Light, Inc. shall be to furnish new or repaired parts free of charge in exchange for parts which have been proved defective and does not include any other costs such as the cost of removal of the defective part, installation, labor or consequential damages of any kind, the exclusive remedy being to require DeepSea Power & Light, Inc. to furnish such new parts. Under no circumstances shall the Buyer be entitled to recover any incidental damages as that term is defined in Commercial Code §2715.

